

Installation Specification Sheet

for Axiom Transit Rack

schleptastic.com | support@schleptastic.com

Tow Monster

by Schleptastic



For Use with [this Video Guide](#)


Tools & Materials (Not Included)

- 8mm Wrench, or Adjustable Wrench, or 8mm Deep Socket
- 3mm Hex Key / Allen Wrench
- Adjustable Pliers
- Electrical Tape (sometimes needed, see video guide)
- Scissors (sometimes needed, see video guide)


Mounting Hardware Parts List

5 x P-Clamp 3/8"	5 x Large Washer
5 x Screw: M5 x 40mm	5 x Small Washer
5 x Finish Washer (Countersunk)	5 x Nut: M5

P-Clamp Positioning

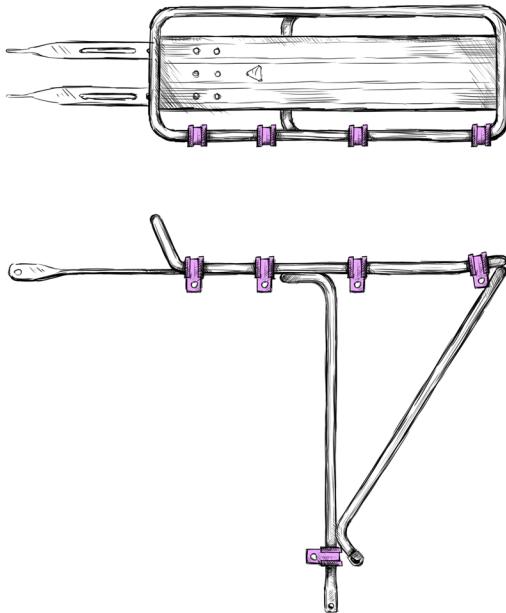

Tow Monster Screw Positioning

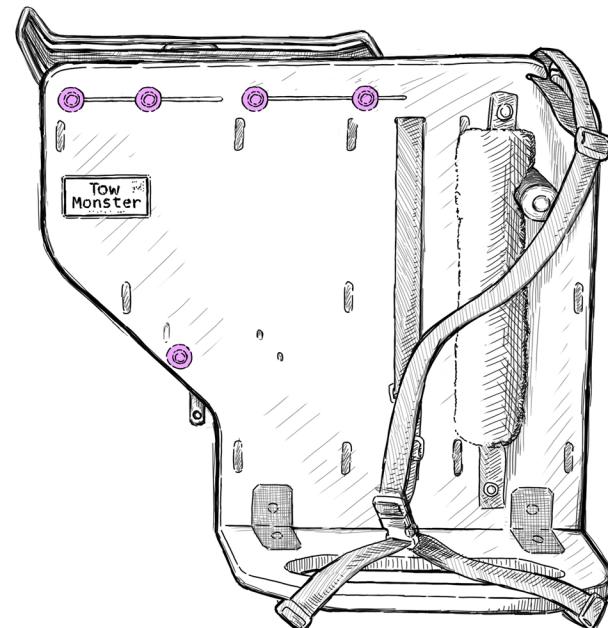


P-Clamp Orientation (detail)

Upper P-Clamps



(screw hole down)


Lower P-Clamp

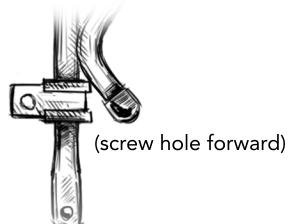

(screw hole forward)

Screw Sequence

Rackside

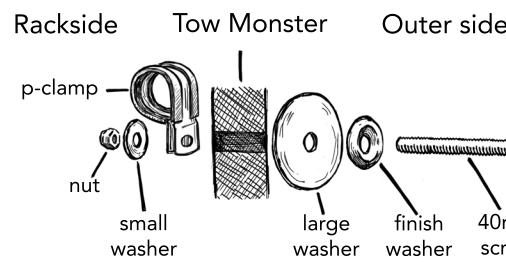

Tow Monster



Outer side

